

Serene S2067

Serene Elite Portable Fan Heater

Operating Instructions



Introduction

The Elite' portable fan heater is designed to deliver instant heat to any location. Your Serene S2067 portable heater is fitted with a cool touch base to allow it to be comfortably moved as needed. This all new model 2067 portable fan heater has been designed to complement your Serene fixed heating products.

Safety Information

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully, and retain for future reference.
- When used by, or near young children or infirm persons, close supervision is necessary. Young children should be supervised to ensure that they do not play with the appliance.
- **DO NOT** use this appliance other than for its intended use.
- Use this appliance with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- **DO NOT** cover the grilles or place any object or material up against the unit as this may block the entry or exhaust of airflow.
- **DO NOT** probe any opening to remove fluff. To ensure trouble-free performance, it is recommended that the unit be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles on a regular basis.
- Regulations require that electrical work be carried out by authorised persons. For your own safety and that of others, ensure this is done.
- **DO NOT** allow the supply cord to come into contact with heated surfaces during operation.
- If the supply cord becomes damaged, it must be replaced by a qualified person in order to avoid a hazard.

Operation

The operation of the heater is controlled by the HI/LOW/OFF control knob and the adjustable thermostat knobs located on the top of the heater. The blue LED indicator lights when the heater is operating.

Thermostat

The heat output is regulated by a built-in thermostat. The thermostat maintains the required ambient temperature by automatically turning the heat on and off as needed.

Starting from the lowest position, turn the thermostat knob clockwise until you hear a 'click'. The heater will then start heating and the LED indicator will light up. The more the thermostat knob is turned clockwise, the higher the ambient temperature will be.

If the ambient temperature is close to 35°C or more, the heater may not turn on even if the thermostat is set on maximum. Alternatively, if the ambient temperature is below 5°C, the heater may operate in 'frost watch' mode continuously even if the thermostat is set on minimum.

To set the thermostat:

1. Turn the thermostat knob clockwise to maximum and wait until a comfortable ambient temperature is reached.
2. Turn the thermostat knob anti-clockwise until you hear a 'click' and the heater turns off.
3. Fine adjustments can then be made.



Care

The heater requires regular cleaning to ensure trouble free operation.

- Isolate the heater from the mains power supply.
- Use a damp cloth to clean the exterior of the heater. Do not use any abrasive cleaners.
- The S2067 is fitted with our new "Airslip" metal fan blade that alleviates any dust build up inside the heater. Use a vacuum cleaner to remove any carpet fiber, dust and fluff visible on the heater inlet and outlet grilles.
- Ensure the heater is dry before turning the mains power supply to the heater back on.

Specifications: Serene S2067

Electrical

Supply 230-240 volts A.C. 50 Hz
Wattage 2200-2400W,
Wiring Double insulated, no earth required.
Ingress Protection Rating IPX1

Dimensions

Height 210mm
Width 300mm
Depth 110mm (includes cool touch base)
Weight 2.35kg

Serene Limited reserves the right to alter specifications without notice.

Contact

NEW ZEALAND

t: +64 (3) 344 5550
f: 0800 437 264
e: nzenquiry@serene-ind.com
w: www.serene-ind.com
PO BOX 33501, Barrington, Christchurch 8024

AUSTRALIA

e: auenquiry@serene-ind.com
w: www.serene-ind.com

HONG KONG

t: + 852 2325 3210
f: +852 2325 3166
e: info@serene-ind.com
w: www.serene-ind.com
1508, 15th Floor, 9, Wing Hong Street, Cheung Sha Wan, Kowloon