

# Serene S2077

Serene Wall Mounted Fan Heater

## Operating Instructions



# Safety Information:



**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully, and retain for future reference.

When used by, or near, young children or infirm persons, supervision is necessary - young children should be supervised to ensure that they do not play with the appliance.

- Use this appliance only with the voltage specified on rating label.
- Do **NOT** use this appliance other than for its intended use.
- Do **NOT** touch hot surfaces or moving parts.
- Do **NOT** cover the grilles or place any object or material up against the unit, as this may block entry or exhaust of air.
- Do **NOT** probe any opening.

To ensure trouble free performance it is recommended that on a regular basis the unit be isolated from the power supply and a vacuum cleaner used to remove dust from the inlet and outlet grilles.

## **Caution:**

When the heater is operated ensure the heater is not obstructed in any way. Ensure the heater can operate safely, should the heater switch on when the ambient temperature drops, or a timer activates the heater.


- Do **NOT** allow the supply cord to come into contact with heated surfaces during operation.
- Regulations require that electrical work be carried out by authorised persons. For your own safety and that of others, ensure this is done.
- If the supply cord becomes damaged, it must be replaced by a qualified person, in order to avoid a hazard

## Figure 1: Installation Distances

### Distances

The heater must be mounted a minimum distance of:

- 1800mm from floor level
- 200mm below the ceiling
- 250mm from adjacent walls
- 500mm between the heater and any objects heated below it.

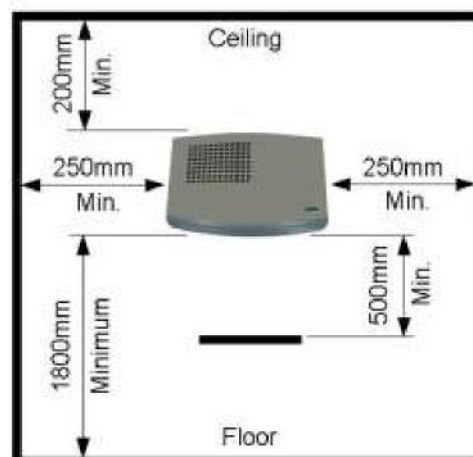

**Important:** The heater must NOT be located immediately below a socket outlet or within reach of a bath or shower .

### To attach the heater to the wall:

1. Remove the wall mounting base from the heater by using a screwdriver (large flat blade) to release both of the side clips from inside the base.
2. Secure the mounting base to the wall using the four fixing screw holes provided. The base supplied with the heater must be used when attaching the heater to the wall.
3. Put the heater onto the mounting base and snap it into position.
4. Connect the flexible cord to the mains power supply. A suitable disconnect device is required to be incorporated in the fixed supply wiring.

### Operation

The operation of the heater is controlled by use of the pull-cord switch. Pull the pull-cord to switch the heater on. Pull the pull-cord again to switch the heater off. The blue LED indicator lights when the heater is operating.

The heat output is regulated by an internal step-down thermostat, which will reduce the output from 2200-2400 Watts to 1100-1200 Watts, when a comfortable room temperature is reached.

### Care

The heater requires regular cleaning to ensure trouble free operation.

- Isolate the heater from the mains power supply.
- Use a damp cloth to clean the exterior of the heater. Do not use any abrasive cleaners.
- Use a vacuum cleaner to remove dust and fluff visible on the heater inlet and outlet grilles.
- Ensure the heater is dry before turning the mains power supply to the heater back on.

## Specifications: Serene S2077

### Electrical

- Supply 220-240 volts A.C. 50 Hz
- Wattage 2200-2400W, thermostatically reduced to 1100-1200W
- Wiring Permanent connection. Double insulated, no earth required.
- Ingress Protection Rating **IPX20**

### Dimensions

Height 220mm  
Width 375mm

Depth 140mm (includes mounting base)  
Weight 2.35kg

Serene Industries Limited reserves the right to alter specifications without notice.

### Contact :

#### HONG KONG

Head Office - Serene Industries Limited

t: +852 2325 3209  
f: +852 2325 3166  
e: [info@serene-ind.com](mailto:info@serene-ind.com)  
w: [www.serene-ind.com](http://www.serene-ind.com)

Suite 1010, 15F, Block A, Alexander Industrial Building, 62 King Lam Street,  
Cheung Sha Wan, Kowloon Hong Kong SAR

#### NEW ZEALAND

t: (+) 64 (3) 344 5550  
f: 0800 437 264- Freefax  
e: [nzenquiry@serene-ind.com](mailto:nzenquiry@serene-ind.com)  
w: [www.serene-ind.com](http://www.serene-ind.com)

PO BOX 33501, Barrington, Christchurch 8024

#### AUSTRALIA

t: (+) 61 (3) 8354 4133  
f:(+) 61 (3) 9699 6422  
e: [enquiries@serene-australia.com](mailto:enquiries@serene-australia.com)  
w:[www.serene-australia.com](http://www.serene-australia.com)

Suite 201 / 175B Stephen Street, Yarraville  
Melbourne VIC 3013