

**Serene Wall Mounted Fan Heater with  
(optional\*) Electronic Timer. Model S207T**



# Specification & Operating Instructions

\* AU and NZ only

SAA CE



# Introduction

Designed for easy installation, your Serene S207T Wall & Bathroom Fan Heater complies to the highest electrical safety standards, includes an 'easy-fix' wall-mounting bracket for faster and easier installation and is fitted with a power saving resettable timer.

## Safety Information

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully, and retain for future reference. For service, contact your nearest authorised service agent.
- Under no circumstances should an unauthorized person open the heater to adjust the thermostat.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Do NOT use this appliance other than for its intended use.
- Use this appliance only with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- Do NOT cover the grilles or place any object or material up against the unit as this may block the entry or exhaust of airflow.
- Do NOT probe any opening to remove fluff. To ensure trouble-free performance, it is recommended that the unit be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles on a regular basis.
- Installation must be performed by a licensed electrician. Regulations require that electrical work be carried out only by properly qualified person. For your own safety and that of others, ensure this is done.
- Do NOT allow the supply cord to come into contact with heated surfaces during operation.

# Installation


## Installation must be performed by a licensed electrician

This appliance **MUST** be installed in accordance with relevant wiring rules and regulations which cover installation of appliances and accessories in damp situations, such as bathrooms, showers, laundries and other areas, fixed water containers according to local safety regulations.

## Distances

The heater must be mounted a minimum distance of:

- 1800mm from floor level
- 200mm below the ceiling
- 250mm from adjacent wall
- 500mm between the heater and any objects immediately below it.

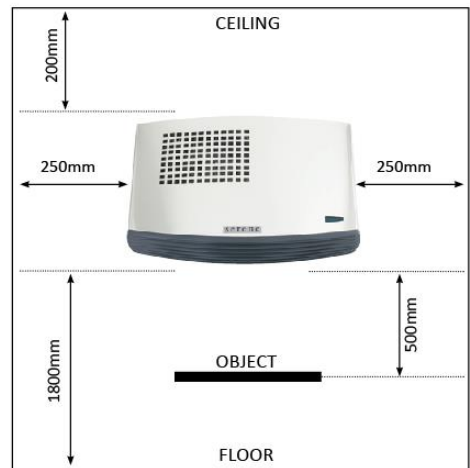

## Important

The heater must **NOT** be located immediately below a socket outlet.

The heater is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

## Safety Cut-out

Your Serene S207T Wall & Bathroom Fan Heater is fitted with an thermal cut-out and a fusible link.

Either of these devices will automatically switch off the element, should the unit reach an abnormal temperature.

This is very unlikely to happen with the introduction of our 'Airsip' technology that largely prevents dust and bathroom lint build- up in the heater other than in very abnormal conditions.

### **However, should this occur:**

Switch Off / Disconnect the heaters power supply at source .

Check for blockage of the air inlet and outlet.

If the heater still fails to operate, contact the installer or place of purchase.


## Operation

### **Timer function:**

The model S207T is fitted with a (optional) clever 30 minute resettable timer that turns OFF the heater automatically if it is accidentally left running and using costly power.

To instantly restart at any time just pull the operation cord or turn the heater on at the wall switch.

**\*NOTE - AU and NZ only:** The timer can be overridden at the time of installation so that the timer no longer operates.

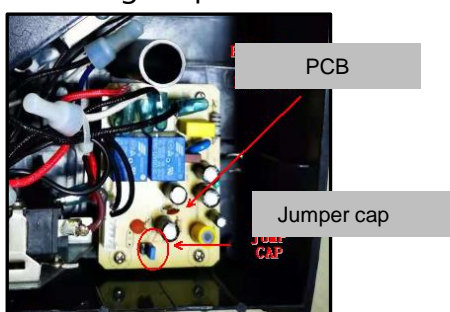

**TO DELETE THE TIMER FUNCTION  
SIMPLY PULL OUT THE JUMPER  
CAP FROM THE PCB BOARD PRIOR  
TO INSTALLATION.**

Air is drawn through the inlet grill in the top cover of the heater by the fan, blown over heating elements, and then blown out through the front grille into the room.

The heater can be controlled by a directly installed wall switch or the pull-cord switch.

The heat output is regulated by an automatic, pre-set step-down thermostat which will reduce the output from 2000 Watts to 1000-1200 Watts when a comfortable room temperature (of between approximately 28 to 34 degrees C is reached

The blue LED indicator lights when the heater is operating.

## Care

The heater requires regular cleaning (every 6 months) to ensure trouble free operation. Isolate the heater from the mains power supply.

Use a damp cloth to clean the exterior of the heater. Do not use any abrasive cleaners. The S207T is fitted with our "Airsip" metal fan blade that alleviates any dust build up inside the heater.

Use a vacuum cleaner to remove dust and fluff visible on the heater inlet and outlet grilles. First making sure that the heater is turned OFF.

Ensure the heater is dry before turning heater back on.

# Specifications: Serene S2078

Electrical Supply	220-240 volts A.C. 50 Hz
Wattage	2000W, thermostatically controlled
Wiring	Hard wired or pull cord operation
Ingress Protection Rating	IP20

## Dimensions

Height	220mm
Width	375mm
Depth	140mm (includes mounting base)
Weight	2.45kg

Serene Industries Limited reserves the right to alter specifications without notice.

## Contact:

### HONG KONG

**Head Office** - Serene Industries Limited

t: +852 2325 3209

f: +852 2325 3166

e: [info@serene-ind.com](mailto:info@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

Suite 1010,10F, Block A, Alexander Industrial Building, 62 King Lam Street,  
Cheung Sha Wan, Kowloon Hong Kong SAR

### NEW ZEALAND

t: + 64 (3) 344 5550

f: 0800 437 264- Freefax

e: [nzenquiry@sereneind.com](mailto:nzenquiry@sereneind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

PO BOX 33501, Barrington, Christchurch 8024

### AUSTRALIA

t: 1800 844 942

e: [auenquiry@serene-ind.com](mailto:auenquiry@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

### UNITED KINGDOM and EUROPE

t: +44 01924 481053

e: [ukenquiry@serene-ind.com](mailto:ukenquiry@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

Unit 2, Royd's Mill Trading Estate, Dyehouse Lane, Brighouse,  
West Yorkshire, HD6 1LL